



Welcome to Telecall intercom systems. To get optimum performance from this equipment, please read this manual thoroughly prior to installation and use. Then, put it in a safe place for future use.

Names of Parts

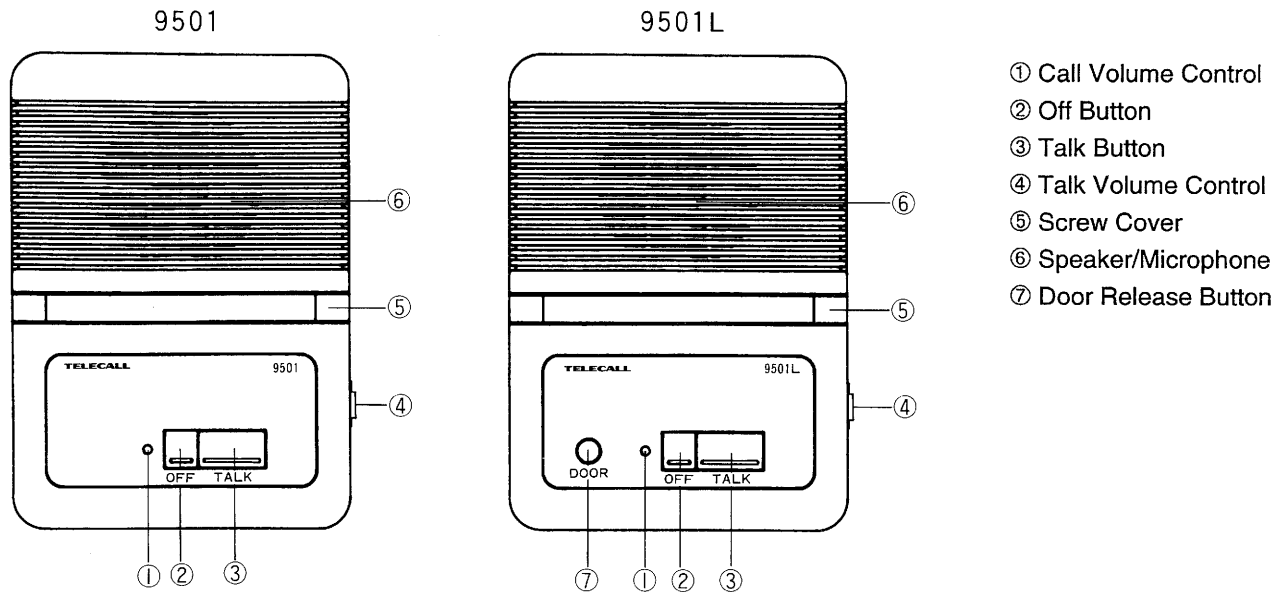


Accessories Included

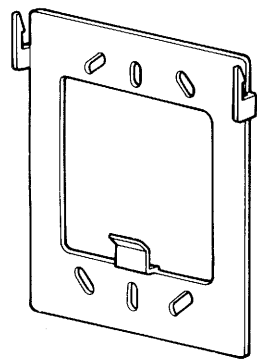

Wall Mounting Bracket

Installation/Operation Manual x 1

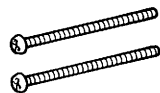


Screws (M4 x 40) x 2



Wood Screws (3.8 x 20) x 2
Wood Screws (3.8 x 32) x 2


Options

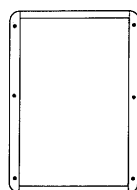


Flush Mounting Bracket (small)
95-BB3

Remotes Which Can Be Connected (options)

Indoor Remotes

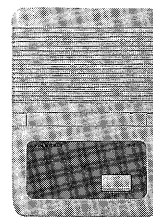


Standard 1-Station Remote
95-R

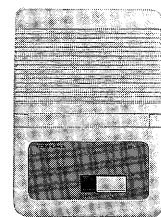

Private Talk 1-Station Remote
95-RP


Doorphones

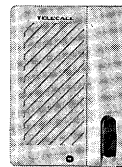

95-W
(surface mounting)



95W
(flush mounting)

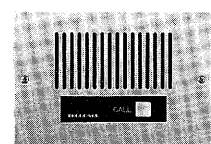


95-WS
(stainless steel/flush mounting)

To the installer: Please hand over this manual to the user after completing the installation.


Wiring Method

- Either 9501 or 9501L (w/door release button) master unit can be used.
- Two master units can be used together by connecting them in parallel.
- Select your desired remote or doorphone.
- Electric power is supplied from optional power supplies.
 - * This system is designed to accommodate voltage fluctuations between 10V and 18V.


[Wiring without electric door strikes] 9501

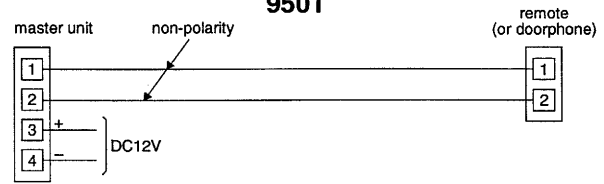

[Wiring when an electric door strike is connected] 9501L

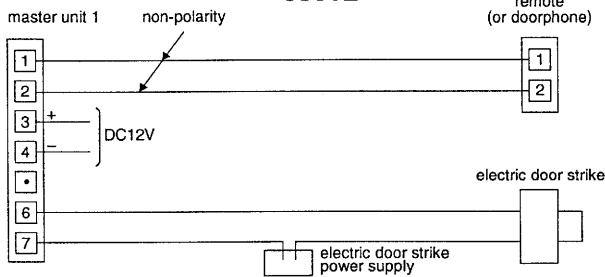

[Wiring when two 9501 L master units are connected]

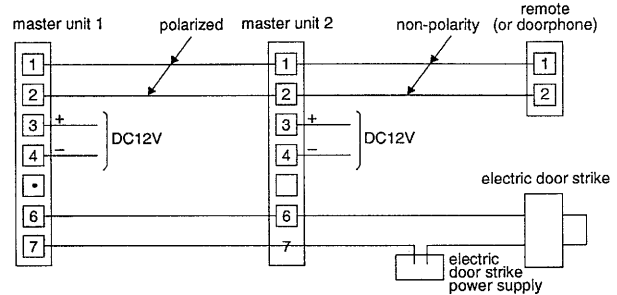


- * An individual power supply is necessary for each master unit.
- * Master to master communication not possible.


Installation

Master units and indoor remotes can be installed in the same manner.


- ① Using a standard mounting box
 1. Secure the accessory wall mounting bracket to the mounting box (1-gang or 2-gang) using the accessory screws.
 2. After wiring, offer the main unit to the wall mounting bracket making sure that the bracket hooks lock into place and the two parts engage positively.

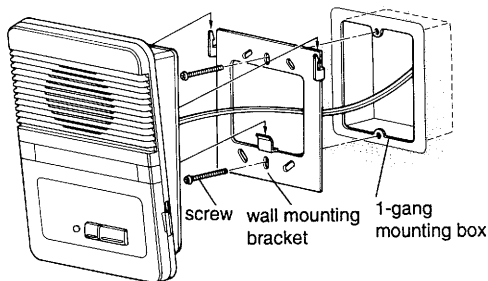


- ② Surface mounting on the wall
 1. Secure the wall mounting bracket directly to the wall using the accessory wood screws.
 2. After wiring, offer the main unit to the wall mounting bracket making sure that the bracket hooks lock into place and the two parts engage positively.
 - * In exposed wiring, pass the wires through the wire port in the top part of the main unit.

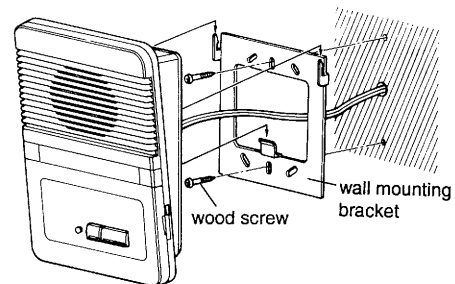

- ③ Flush mounting using flush mounting bracket
 1. Make a cut-out in the wall to the dimensions as illustrated, and mount the flush mounting bracket (option) on the wall using the accessory wood screws.
 2. After wiring, remove the two screw covers from the front panel and screw the main unit to the flush mounting bracket using the accessory screws.
 3. Replace the screw covers on the front panel.

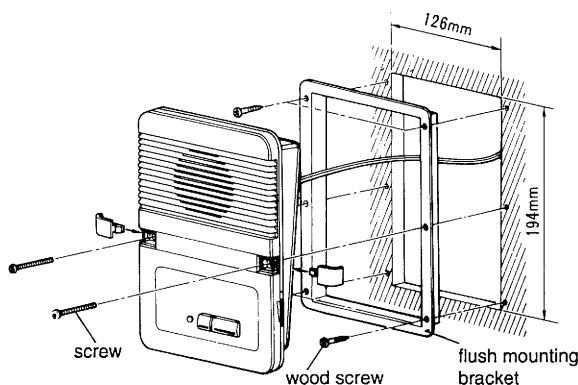

- ④ Flush mounting directly to the wall
 1. Make a cut-out in the wall to the dimensions as illustrated.
 2. After wiring, remove the two screw covers from the front panel and screw the main unit directly to the wall using either the wood screws or metal screws provided as accessories.
 3. Replace the screw covers on the front panel.

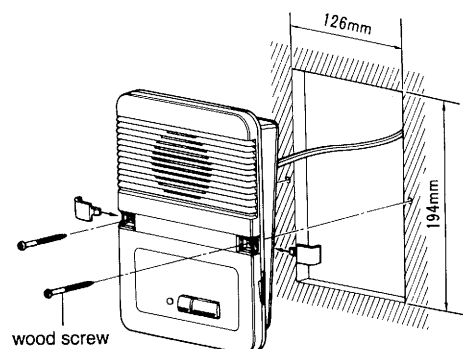

How to Operate

This unit is an alternative speaker talk type; press the Talk Button on the master unit to talk and release the button to listen. (See diagrams 1, 2.)

Changeover between talk and listen on the remote (or doorphone) side is not possible.

■ Calling the remote (or doorphone)

1. Call, by voice, while depressing the Talk Button. Release the button and wait for the answer.
2. When answered, begin conversation; depress the Talk Button to talk and release to listen. (See diagrams 1, 2.)
 - * If the remote is a private talk type, cancel the Private Button on the remote side and begin talking. (See diagram 3.)
3. After conversation, do not forget to depress the Off Button to return to standby status. (See diagram 4.)

■ When called from the remote (or doorphone)

1. When called from the remote (or doorphone), you are informed by a buzz.
 - * The buzzer volume can be adjusted by the Call Tone Volume Control.
2. Talk alternatively; depress the Talk Button to talk and release to listen. (See diagrams 1, 2.)
3. After conversation, do not forget to depress the Off Button to return to standby status. (See diagram 4.)

■ When two master units are connected

1. When called from the remote (or doorphone), you are informed by a buzz on the two master units.
 - * The buzzer volume can be adjusted by the Call Tone Volume Control on each master unit.
2. Answer with one master unit; depress the Talk Button to talk, release to listen. (See diagrams 1, 2.)
 - * A busy tone is heard on the other master unit (the one that did not answer the call) while the Talk Button is being pressed on the communication master. Do not use the master unit during this status.
 - * Do not press the Talk Button at the remote in communication.
 - * Master to master communication is not possible.
3. After conversation, do not forget to depress the Off Button to return to standby status. (See diagram 4.)

■ How to use the Door Release Button (9501L)

1. Depress the Door Release Button to unlock the electric door strike (optionally) installed on the entrance door. (See diagram 5.)

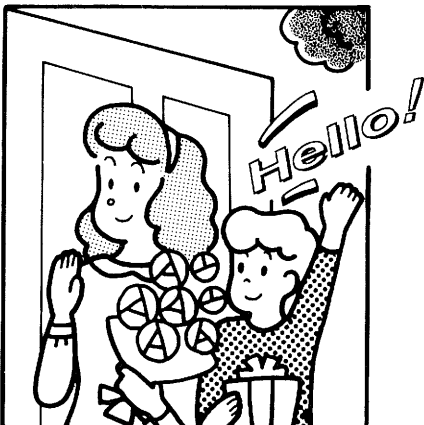


Diagram 1.
Talking

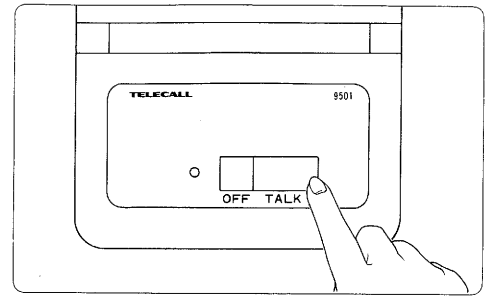


Diagram 2.
Listening

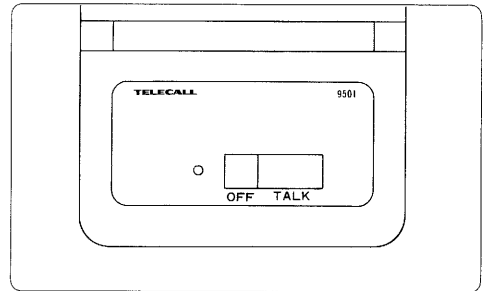


Diagram 3.

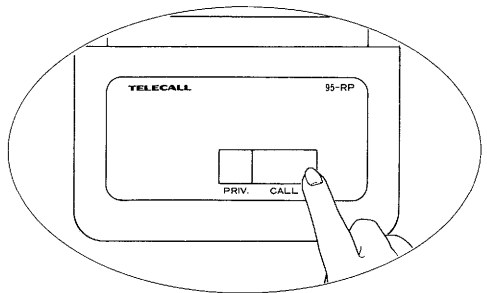


Diagram 4.

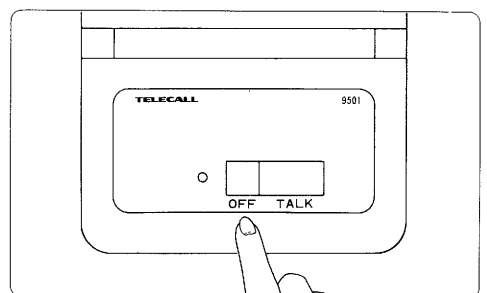


Diagram 5.

